

# vectu<sup>®</sup>

LOCATING MADE SIMPLE



## OWNER'S MANUAL

### ON-DEMAND PERSONAL GPS LOCATOR

V02-2015

# CONTENTS

CONTENTS OF THE PACKAGE .....	3
SAFETY .....	3
GETTING STARTED .....	4
USING VECTU .....	7
myAspenta WEB/MOBILE APP .....	10
GENERAL USAGE TIPS .....	17
SUPPORT .....	17
CARE AND PREVENTIVE MAINTENANCE .....	17
LIMITED WARRANTY .....	17
FCC COMPLIANCE .....	18
NOTICES .....	18

A PRODUCT OF



Redefining Connectivity

Hello!

**Thank you for purchasing the Vectu On-demand Personal GPS Locator.**

Before using your device for the first time, read this owner's manual carefully and retain it for future reference.

## CONTENTS OF THE PACKAGE

- ① Vectu On-demand Personal GPS Locator with installed SIM card & integrated rechargeable battery
- ② Micro USB cable
- ③ Quick Start Guide

## SAFETY

### ELECTROMAGNETIC COMPATIBILITY

Magnetic fields in the vicinity of Vectu may cause disturbances in data transmission and should be avoided to prevent malfunction or damage to the device.

### NOTE – NATIONAL LAWS ON GPS TRACKING

You agree to use Vectu only for lawful purposes. Certain states/countries may have legislation which restricts the GPS tracking of people, animals or objects. You are responsible for complying with all applicable federal, state and local laws. If you are located outside of the United States, you are responsible for complying with the laws of your country or legal jurisdiction with respect to your use of our Products and Services. Aspena International bears no responsibility or liability for any use of its Products or Services that may be unlawful in the United States or elsewhere.

### SAFETY ADVICE

When in a hospital or other health care facility, observe the restrictions on the use of mobile devices, such as cellular phones. Do not operate this device where you are not able to operate your mobile / cellular phone.

### THE BATTERY AND ITS USE

Vectu is powered by a rechargeable lithium ion battery. To prevent malfunction or damage, it is advisable to follow these recommendations for the use of rechargeable batteries:

- Do not remove or replace the original battery
- To avoid irreparable damage to the battery and circuits, do not expose the device to heat sources.

### DISPOSAL

Batteries are a source of pollution. When you decide to dispose of Vectu, seek advice from your local electronics recycling authority.

### TEMPERATURES


While charging, Vectu should not be exposed to temperatures below 0°C or above 45°C. During normal use, Vectu should not be exposed to temperatures below -20°C/-4°F or above 55°C/131°F. Vectu should not be exposed to direct sunlight for long periods, and should be stored at temperatures between -20°C/-4°F and 55°C/131°F.

## GETTING STARTED

Vectu® On-demand Personal GPS Locator is a portable location and safety device, perfect for keeping an eye on your loved ones or possessions using myAspenta web or mobile app. The device features unlimited, real-time on-demand location updates, extended life battery, and help button that set off an alert in case of emergency. GPS-enabled Vectu also uses GSM cellular networks to report whereabouts and allows you to keep track of your loved ones anywhere in the world, where GSM cellular reception exists (excludes Japan, S. Korea and N. Korea).



We deliver Vectu with an installed SIM card and first years' service fee included – no service contract required, no roaming charges, no activation fee.

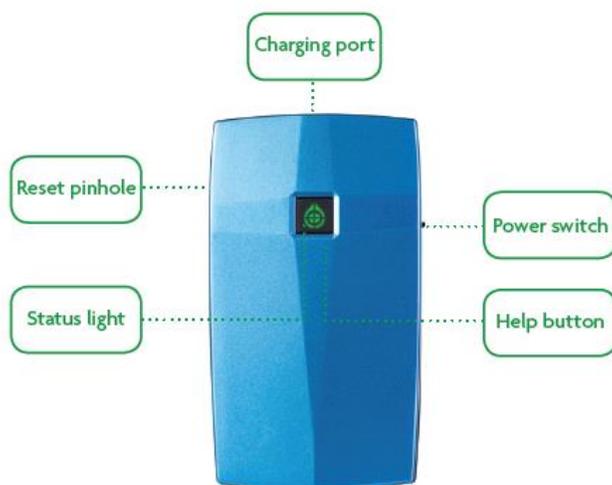

### CHARGE

- 1 Plug the micro USB cable to the device and connect it to USB port or an electrical outlet using AC adapter.
- 2 Slide the power switch to the ON position. Within 15 seconds status light will blink yellow indicating charging.\*
- 3 Charge until status light turns solid yellow.

**\*FIRST RELEASE DEVICES WILL NOT CHARGE IF THE POWER SWITCH IS IN THE OFF POSITION – STATUS LIGHT BLINKS RED RAPIDLY - SLIDE THE POWER SWITCH TO THE ON POSITION TO INITIATE CHARGING.**

For best results it is preferable to charge Vectu from a normal socket rather than connection to a PC. You will need to charge Vectu for at least 6 hours from a normal socket prior to first use.

**Note:** If the battery is completely drained, allow few minutes for the status light to turn on.

### DOWNLOAD APP OR ACCESS ONLINE

- 1 Download and install free **myAspenta** mobile app, or visit myAspenta online at [myAspenta.com](http://myAspenta.com).  
If you already have myAspenta account, simply login with your username/email address and password.

myAspenta lets you locate and manage multiple devices from a single account, whether yours or shared with you. You may also share your device with other myAspenta users.



For Android 2.3 and higher  
Go to **Google Play**, search for myAspenta and follow the instructions.



For iOS 7.0 and higher  
Go to **App Store**, search for myAspenta and follow the instructions.



For other smartphones and computers access online  
Go to [myAspenta.com](http://myAspenta.com).

2

If you need to create a new account, you will be asked to enter your


- First and Last Name
- Email Address and Mobile Phone Number (where device notifications will be sent)
- and create username and password which you will use to login

For your security, establishing myAspenta account is a two-step process, requiring verification of your email address. Your account is not complete until you click on the link provided in the verification email.

## ACTIVATE


1

Access the myAspenta app you just downloaded or the [myAspenta.com](http://myAspenta.com) online portal and login.

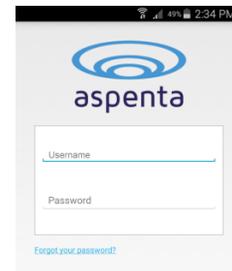

2

Select the '+' button to add a Vectu device.

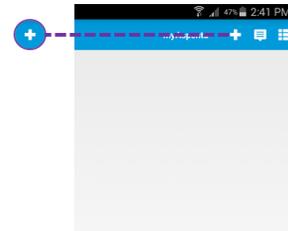


3

Add Vectu by typing 12 characters serial number provided on the back of the device. Choose device name and select 'next'.

If you are using myAspenta mobile app you may also add Vectu via Bluetooth\*. To do so make sure that Bluetooth feature on your phone is enabled and the device power switch is in the




Serial Number

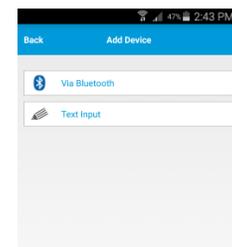

\*The Bluetooth feature will only work with smartphones that support Bluetooth 4.0 and are running Android 4.3/iOS 7.0 and higher


ON position. Double click the help button - status light will blink white indicating Bluetooth activity.

- 4 You may designate up to four phone numbers and four email addresses to receive notifications. By default notifications will be also sent to the email address and phone number specified during myAspenta account creation. Visit your account settings to update notification and contact settings.

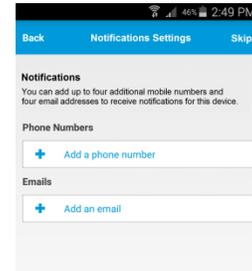

- 5 You may also share Vectu with friends and family having myAspenta account. To do so, simply type **username or email address** of the user you wish to share your device with.

**myAspenta users you have shared Vectu with will be able to request device location, view heatmap and reports as well as receive in-app notifications.**

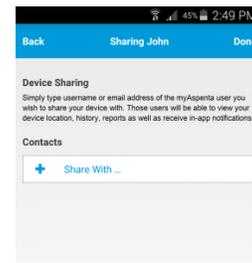

## INITIAL SYSTEM TEST

Perform an initial system test to evaluate operational condition of the device and readiness of those you've chosen to receive notifications.

- 1 Slide the power switch to the ON position - the status light blinks red as Vectu goes through network registration process. Once this process is completed the status light will turn off.
- 2 Press and hold help button until the status light goes blue.
- 3 Wait until status light blinks blue five times indicating that the help alert was successfully delivered to the server (if the status light doesn't blink blue in 60 seconds, repeat step 2).
- 4 Verify that the help alert was received by you and designated contacts (if any).
- 5 Log onto myAspenta account and verify that you can view device location on the map along with last seen date/time.
- 6 You can also view your notifications history via myAspenta web or mobile app.

It is advisable to carry out initial system test in a completely open space, with the help button facing upwards. If the status light blinks red for more than 5 minutes, switch the device off and on and repeat above steps.

Vectu uses GPS and GSM technology to determine its location. If the device is indoors or if the GPS signal is not strong enough, the GPS location data may not be received. In that case the device location will be based on the cellular network signal (GSM location), this location is not accurate, but rather an approximation of the device location. If GPS signal is not available, shaded circle around the marker on the map represents accuracy of the location.

# USING VECTU



Vectu can be located ON-DEMAND from myAspenta app or once the HELP BUTTON WAS PRESSED. To locate from myAspenta app - select the device and click the 'Locate' button - the device will transmit location every 30 seconds for 5 consecutive minutes. (If Vectu is unreachable within 30 seconds from 'Locate' request, the device might be turned off, out of battery, or is in an area which doesn't have cellular reception).  
THE LOCATION DATA IS REFRESHED ON THE MAP FOR A LIMITED TIME ONLY. THIS DEVICE IS NOT DESIGNED FOR CONTINUOUS MONITORING.

## TURN VECTU ON/OFF

To turn the device ON, slide the switch to the ON, the status light blinks red as Vectu goes through network registration process. The status light turns off when the device enters standby mode and is ready to use.

To turn the device OFF, slide the switch to the position OFF (when device is turned OFF it cannot send or receive communications).

Every time you turn Vectu ON, the status light will blink red until it connects to the network. In the complete absence of a signal, the status light will blink red continuously.

## SENDING HELP ALERT OR CHECK-IN

To check-in or to ask for help from friends and family in critical situation press and hold the help button for two seconds – status light will turn blue. Once the message is successfully delivered to the server status light will blink blue five times (if the status light doesn't blink blue after 60 seconds, press and hold the help button again).

Device owner and designated email addresses/phone numbers (if any) will receive a notification with a link to view the location using Google Maps.

IT IS RECOMMENDED TO 'LOCATE' THE DEVICE THROUGH myAspenta APP AFTER RECEIVING THE HELP ALERT TO ENSURE HIGHER LOCATION ACCURACY.

## MONITORING THE DEVICE STATUS

Status Light	Event
Solid Yellow*	Fully charged
Blinks Yellow once/second*	Charging (35% full or less)
Blinks Yellow twice/second*	Charging (35%-65% full)
Blinks Yellow three times/second*	Charging (65% full or better)
Solid Red	Low Battery
Blinks Red slowly	Connecting to network
Blinks Red rapidly*	Not charging - slide the power switch to ON position to initiate charging (first release devices only)
Solid blue for 5 seconds	Help alert initiated
Blinks Blue 5 times	Help alert delivered to server
Blinks White	Bluetooth ON
Solid White	Firmware update in progress (Bluetooth ON)

\*Device is connected to external power

## CHECKING BATTERY LEVEL

To check the battery level when the device is not connected to external power, briefly press the help button and observe the status light.

- blinks yellow once/second - 35% full or less
- blinks yellow twice/second - 35%-65% full
- blinks yellow three times/second - 65% full or better

You may also view battery level using myAspenta app, it is updated every time you request device location or help alert was initiated.

Status light will turn solid red when the battery level is under 15%.

## NOTIFICATIONS

Notifications let device owner and pre-defined contacts know of an event experienced by the device – those depending on your settings can be delivered by SMS, email and in-app notification. myAspenta users with whom you have shared your device will automatically receive in-app notifications.

- **Help Alert** - when the help button is pressed for two seconds or more, alert recipients will be notified that the device user needs assistance.
- **Geofence Alert** - when the device has departed a predefined geofence (This alert will be send ONLY after location request from the app or help alert)
- **Low Battery Alert** - low power notification sent when the battery life drops below 15%.

## BATTERY LIFE

Mode	Battery Life
Standby	Up to 100 hours
Active Locator Service	Up to 160 location updates (10 location updates per request)

Battery operated devices require the user to achieve a balance between battery life and performance. There is, however, a direct and inverse relationship between the frequency of updates and the overall battery life, with more frequent updates resulting in a shorter battery life. Many factors affect battery life. These factors include, but are not limited to: region (rural or suburban), proximity to cell towers, indoor use versus outdoor use, cell phone inhibitors placed in public areas such as schools, areas next to military bases, etc.


When your Vectu locator indicates low battery (status light is red), recharge your battery as defined in the previous section titled “Getting Started”.

## FIRMWARE UPDATES


To help keep Vectu up-to-date, firmware updates happen periodically and can be performed via Bluetooth ONLY through the myAspenta mobile app. Firmware update feature will only work with smartphones that support Bluetooth 4.0 and are running Android 4.3/iOS 7.0 and higher. You will receive in-app notification once firmware update is available.

Follow below outlined steps in order to update your device’s firmware.


- 1 Enable Bluetooth on your phone. Tap “More” button in the Home view and select “Firmware Update”. Number in the brackets indicates that new firmware is available.

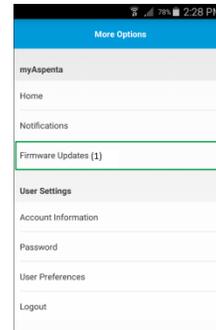

- 2 Select desired device and tap “Ready for download” to download the firmware. Once completed you will see ‘Ready for Install’ note. Tap again on the device image to proceed.

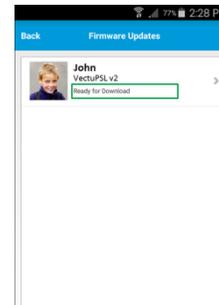

- 3 Enable Bluetooth on your device by double clicking the help button. Tap “VectuPSL” in myAspenta app to initiate firmware update (it might take up to one minute for the device to appear on the list).

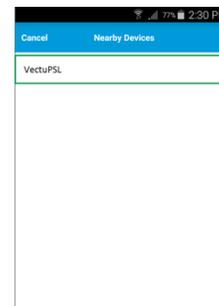

- 4 Once completed turn the device will be automatically through network registration process - status light will blinks red. The status light turns off when the device enters standby mode and is ready to use. Remember to perform INITIAL SYSTEM TEST (page 6) to verify firmware update.

## SUBSCRIPTION RENEWAL

Vectu comes with first years’ service fee included. Service fee is required after the first year. You will receive reminder email & in-app notifications prior subscription expiry. To renew your subscription:

- myAspenta web app: go to “User Settings” and select “Subscriptions”
- myAspenta mobile app: select “Subscriptions” from the main app menu

In case subscription has expired the device will be deactivated and cease to function. It is your responsibility to ensure that the subscription is renewed.

# myAspenta WEB/MOBILE APP



In this section you will find information needed to start using the myAspenta app. In the following pages you will find two sub-sections: one for myAspenta mobile app (Android, iOS), the other for a web platform accessed from [myAspenta.com](http://myAspenta.com).


The first time you log into the myAspenta web or mobile app, you will be directed to the “Home” page. It is recommended that you go directly to the “User Settings” to complete **User Preferences** – time zone, measurement units and notification preferences.

## MOBILE APP

### MAP VIEW

When you open myAspenta app and select your device, you will immediately go to the MAP VIEW. The map will be dimmed if the location update was not transmitted in the last 5 minutes. Green marker  represents GPS location, blue marker  represents GSM location – it is location based on the GSM triangulation, this location is not accurate, but rather an approximation of the device location.

**Note:** If the device was never used you will see a note “Location information not available”. You will need to perform initial system test to view location on a map – see Page 6.

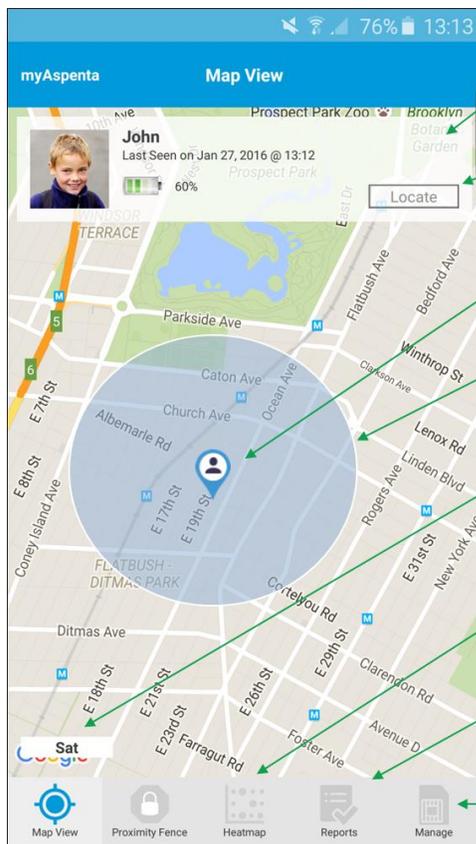

#### DEVICE DETAILS

Your device's name and photo, last seen time/date, battery level.

#### LOCATE

Tap this button to request device location.

#### PIN

This shows the latest known position of your device.

#### SHADED CIRCLE

This represents accuracy of the location if GPS signal is not strong enough.

#### MAP MODE

If you select the “Sat” button, you have the option to view the map in satellite form. If you select “Map”, the map will be displayed in a typical street map format.

#### HEATMAP

To view device location details for a particular day, select the “Heatmap” tab.

#### REPORTS

Clicking on this icon will open Reports showing past low battery and help alerts details.


#### MANAGE

Clicking on this icon will open device settings (notification settings, sharing settings, delete device option)

## HEATMAP

To view device location requests data for a particular day, select the “Heatmap” tab. Select desired date and location request. Green marker (or • - iOS myAspenta app) represents GPS location, blue marker (or • - iOS myAspenta app) represents GSM location – it is location based on the GSM triangulation, this location is not accurate, but rather an approximation of the device location.


We retain historical information for past 90 days.

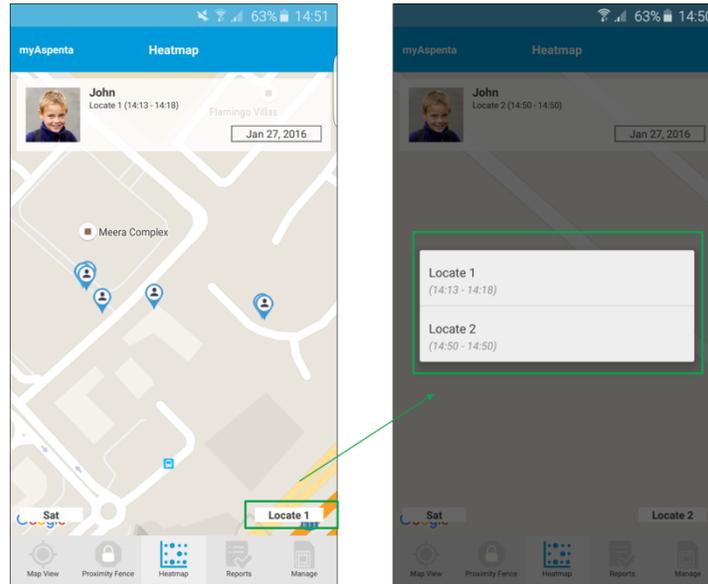

## REPORTS

To view reports, go to the “Reports” tab. You may display following records: location reports, power and battery alerts, help alerts. Choose desired date and report type to view the details. You may select any record and the location of the device at given time will be displayed on the map.

We retain historical information for past 90 days.

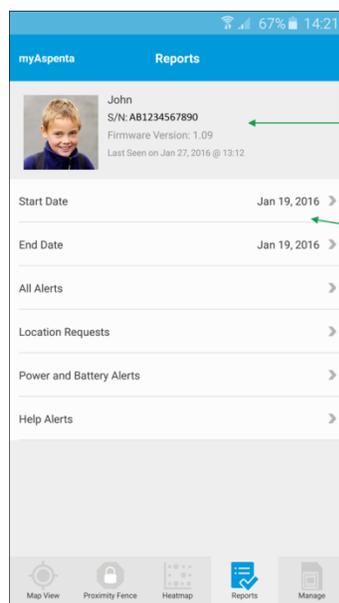

### DEVICE INFORMATION


View current firmware version, serial number and last seen date/time. To change device image tap on the current picture. To change device name tap on the information box.

### START/END DATE

Select desired start/end date

## MANAGE DEVICE

To access device settings tap “Manage” icon in the Map View and select your device.

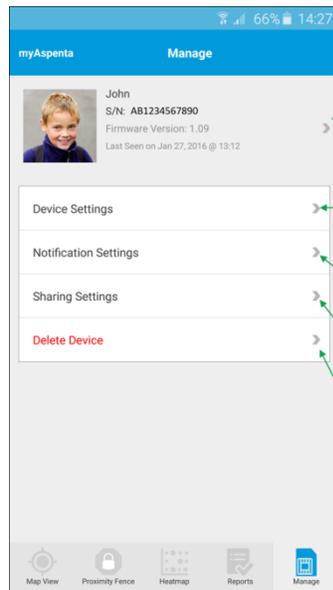

**DEVICE INFORMATION**  
View current firmware version, serial number and last seen date/time. To change device image tap on the current picture. To change device name tap on the information box.

**DEVICE SETTINGS**  
Create, adjust or delete geofence. Each time the device leaves designated area, you and your contacts will receive notification (Notification will be send ONLY after location request from the app or help alert).

**NOTIFICATION SETTINGS**  
You can add up to four additional mobile numbers and email addresses to receive all notifications.



**SHARING SETTINGS**  
You may also share Vectu with friends and family having myAspenta account. Users you have shared Vectu with will be able to view device location, reports and receive in-app notifications.

**DELETE DEVICE**  
Deleting device removes permanently history and reports. You will no longer be able to view device location or receive notifications.

Users you share your device with cannot edit device notification settings or sharing settings. Those users will be only able to view geofence location, and remove themselves from viewing shared device at any time.

## GEOFENCING

The geofence function allows you to create virtual limits around your device. In the park, on the beach, or at home you will always know whether your device is inside the area you have set. If you have requested device location, or the help alert was initiated and the device has left the geofence, you and predefined contacts will receive a notification. Geofence alert will also be sent after the low battery alert is the device is outside of the geofence.

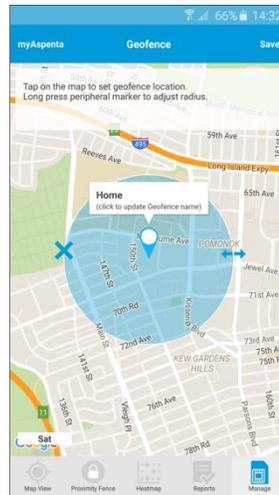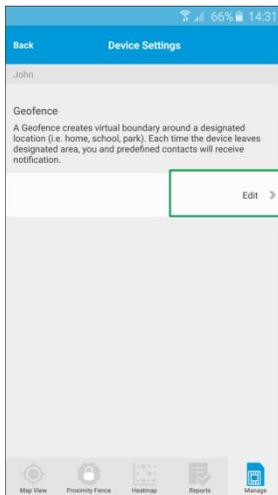

Follow below steps to create a geofence:

- ① Tap “Manage” icon, select your device and tap “Device Settings”
- ② Select “Setup” geofence
- ③ Tap on the map to set geofence location. Long press peripheral marker to adjust the radius.
- ④ Add geofence name and tap “Save”

Android: To remove geofence click on the “X” symbol and tap “Save” button.

iOS: To remove geofence go to “Device Settings”, swipe left “Geofence” and select delete.


A geofence which is too limited in size may cause false alarms due to inherent inaccuracies in GPS. To avoid getting false alerts, make sure your geofence has a radius of at least 300 m/980 feet.

## WEB APP

### MAP VIEW

When you open myAspenta app and select your device, you will immediately go to the MAP VIEW. The map will be dimmed if the location update was not transmitted in the last 5 minutes. Green marker  represents GPS location, blue marker  represents GSM location – it is location based on the GSM triangulation, this location is not accurate, but rather an approximation of the device location.

**Note:** If the device was never used you will see a note “Location information not available”. You will need to perform initial system test to view location on a map – see Page 6.

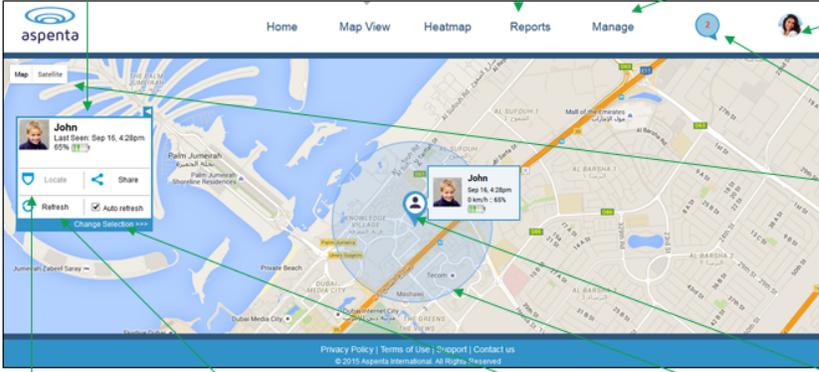

**DEVICE DETAILS**  
Your device's name and photo, last seen time/date, battery level.

**REPORTS**  
Clicking on this icon will open Reports showing past locations, low battery and help alerts details.

**MANAGE**  
Clicking on this icon will open device settings (notification settings, sharing settings, delete device option)

**USER SETTINGS**  
By clicking here, you can access your personal settings, subscriptions and sign out of myAspenta.

**NOTIFICATIONS**  
Clicking this icon will display recent notifications.

**MAP MODE**  
If you select the “Map” button, the locations will be displayed in a typical street map format. If you select the “Satellite” button, you have the option to view the locations either in satellite form only, or if you prefer, you may select the drop down box entitled “Labels” to display the street names overlaid on the satellite image.

**LOCATE**  
Click this button to request device current location.

**REFRESH BUTTON**  
If your screen has remained open to the “Map View” for a period of time, remember to click the ‘Refresh’ button to draw down the most current location information.


**CHANGE SELECTION**  
You can select to view another device in Map View.

**SHADED CIRCLE**  
This represents the accuracy of the location if GPS signal is not strong enough.

**PIN**  
This shows the latest position of your device. To view the current speed, simply go over the pin.

### HEATMAP/HISTORY

To view device location data for a particular day, select the “Heatmap” tab. Last location request data will be displayed - you may select another date and location request from dropdown menu.

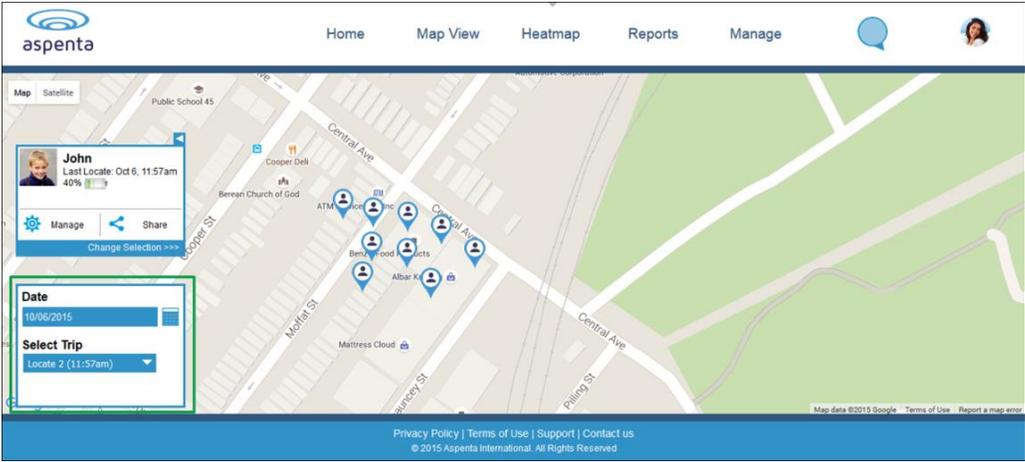


The screenshot shows the Heatmap view in the myAspenta app. The top navigation bar includes Home, Map View, Heatmap, Reports, and Manage. The main map area displays a street grid with several blue location markers. A sidebar on the left contains a device profile for 'John' with a 'Last Locate' of 'Oct 6, 11:57am' and a battery level of 40%. Below the profile is a 'Date' dropdown menu set to '10/06/2015' and a 'Select Trip' dropdown menu set to 'Locate 2 (11:57am)'. The bottom of the screen features a footer with 'Privacy Policy | Terms of Use | Support | Contact us' and '© 2015 Aspenta International. All Rights Reserved'.

Green marker  represents GPS location, blue marker  represents GSM location – it is location based on the GSM triangulation, this location is not accurate, but rather an approximation of the device location. We retain historical information for past 90 days.

## REPORTS

To display the Report details, click the “Reports” button in “Map View”. You may display following records: power and battery alerts, location updates, help alerts. Choose desired date and report type and click submit, you may select any record and the location of the device at given time will be displayed on the map. We retain historical information for past 90 days. If you wish to maintain a record, print the report or save the downloaded file.

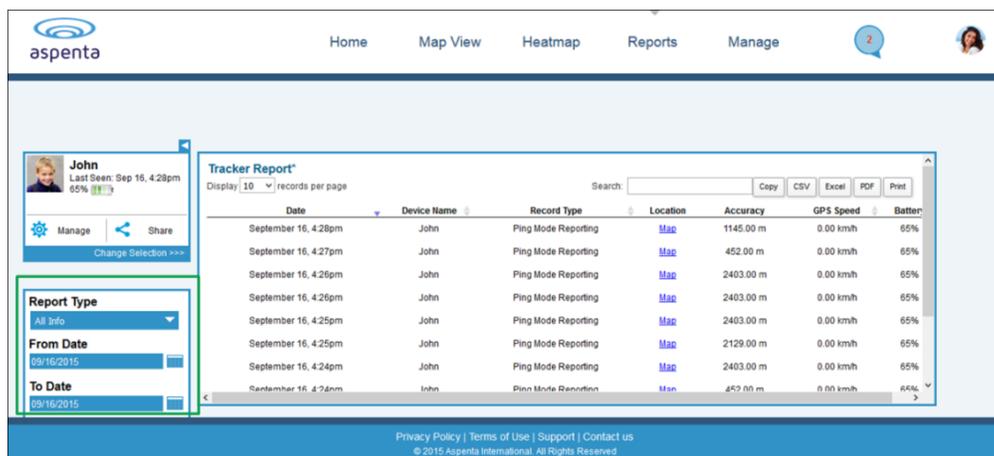


The screenshot shows the 'Tracker Report' for a device named 'John'. The report displays a table of records with columns for Date, Device Name, Record Type, Location, Accuracy, GPS Speed, and Battery. The 'Report Type' and 'From Date' fields are highlighted with a green box.

Date	Device Name	Record Type	Location	Accuracy	GPS Speed	Battery
September 16, 4:28pm	John	Ping Mode Reporting	<a href="#">Map</a>	1145.00 m	0.00 km/h	65%
September 16, 4:27pm	John	Ping Mode Reporting	<a href="#">Map</a>	452.00 m	0.00 km/h	65%
September 16, 4:26pm	John	Ping Mode Reporting	<a href="#">Map</a>	2403.00 m	0.00 km/h	65%
September 16, 4:26pm	John	Ping Mode Reporting	<a href="#">Map</a>	2403.00 m	0.00 km/h	65%
September 16, 4:25pm	John	Ping Mode Reporting	<a href="#">Map</a>	2403.00 m	0.00 km/h	65%
September 16, 4:25pm	John	Ping Mode Reporting	<a href="#">Map</a>	2129.00 m	0.00 km/h	65%
September 16, 4:24pm	John	Ping Mode Reporting	<a href="#">Map</a>	2403.00 m	0.00 km/h	65%
September 16, 4:24pm	John	Ping Mode Reporting	<a href="#">Map</a>	452.00 m	0.00 km/h	65%

## DEVICE INFORMATION

In order to change device name or upload a picture go to “Device Information” tab within “Manage” menu. You may also delete the device. Deleting device removes permanently history and reports. You will no longer be able to view device location or receive notifications.

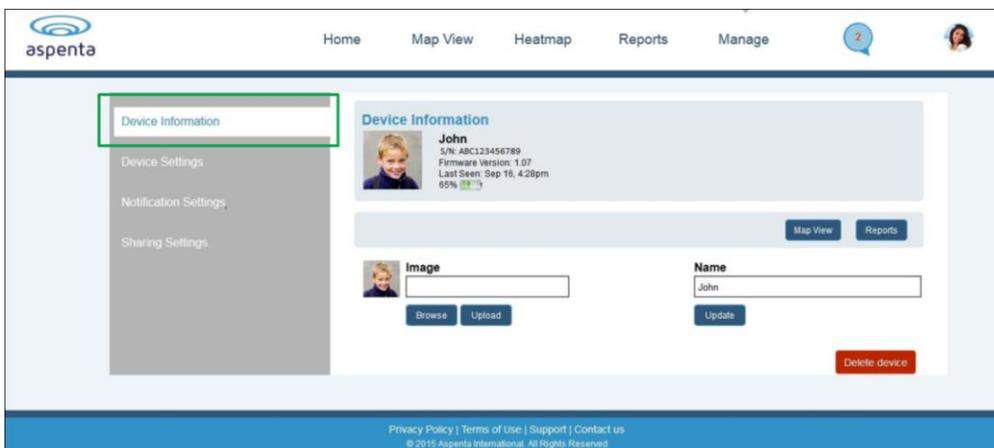

The screenshot shows the 'Device Information' page for a device named 'John'. The page includes fields for Name, Image, and a 'Delete device' button.


## GEOFENCING

The geofence function allows you to create virtual limits around your device. In the park, on the beach, or at home you will always know whether your device is inside the area you have set. If you have requested device location, or

the help alert was initiated and the device has left the geofence, you and predefined contacts will receive a notification. Geofence alert will also be sent after the low battery alert is the device is outside of the geofence.

Follow below steps to create a geofence:

- ① Go to “Device Settings” within “Manage” menu
- ② Click “Create Geofence”
- ③ To adjust the pin, drag the pin to your desired location and drop it. To move the map, place your cursor away from the pin and drag.
- ④ Add geofence name and click “Done”

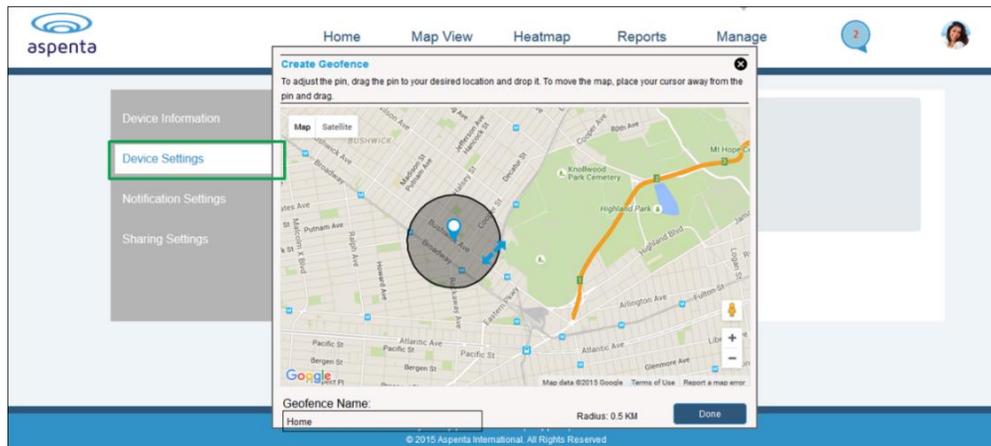

A geofence which is too limited in size may cause false alarms due to inherent inaccuracies in GPS. To avoid getting false alerts, make sure your geofence has a radius of at least 300 m/980 feet.


To remove geofence click “Remove Geofence” button within “Device Settings” menu.

### SETTING UP NOTIFICATIONS RECIPIENTS

You can add additional trusted individuals to help monitor your Vectu On-demand Personal GPS Locator and receive notifications - click “Manage” button and select “Notification Settings”. You can add up to four email addresses and up to four phone numbers to receive notifications. Click “Save” button to save notification settings.

To edit notification settings, simply click the EDIT button  located after the particular email address/phone number. You may DELETE (✕) particular email address/phone number at any time.

By default notification will be also send to the email address and phone number specified in your “Account Information”. Visit “User Preferences” section to update notification preferences.

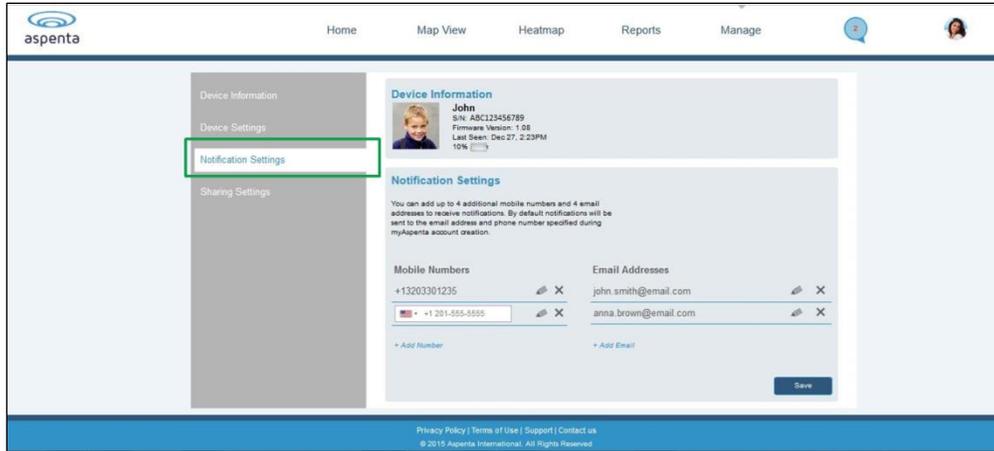


## DEVICE SHARING

You may also share your device with your friends or family members. To access the sharing preferences go to the device “Manage” view and select “Sharing Settings”. Type username or email address of the user you wish to share your device with. Click “Save” button to save sharing preferences.

In case this person is not registered yet, you may send an invitation to join myAspenta. Once this individual creates an account, you will be able to share your device.

You may stop sharing your device at any time by clicking the ‘x’ button. Users you have shared your device with can also unshare the device.

Users you have shared your device with will be able to request device location, view settings, reports and heatmap as well as receive in-app notifications.

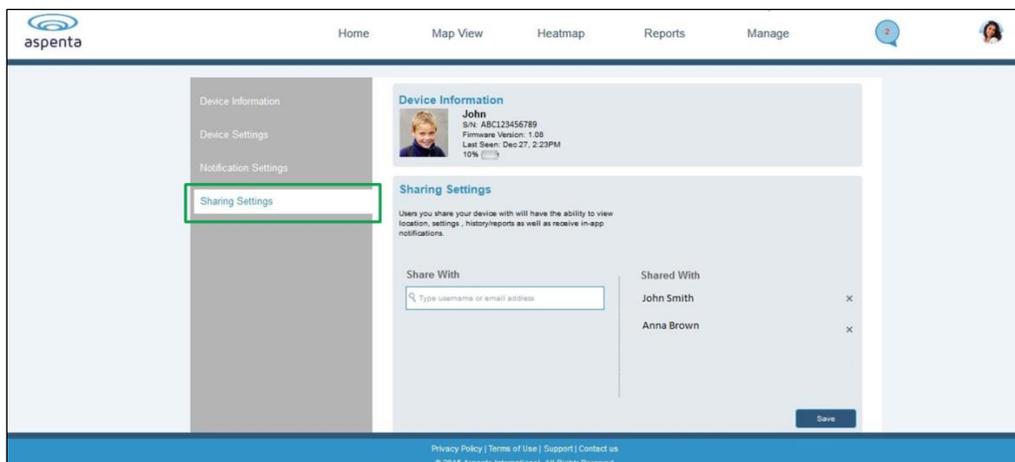

## GENERAL USAGE TIPS



Vectu includes installed SIM card and works worldwide, anywhere GSM cellular reception exists (excludes Japan, S. Korea and N. Korea).

---

GPS devices work by receiving satellite signals from the open sky. For optimal operating conditions, your Vectu locator needs to be in clear, unobstructed view of the sky in order to have a line of sight to a group of satellites. When placing the locator in an item such as a briefcase, luggage, or backpack, please ensure that there is no solid material (e.g. metal objects) above or surrounding the locator which may block or weaken the signal it receives from the sky. GPS satellites are in constant motion, rising and setting. Under certain conditions this means a location position that was obtainable fifteen minutes ago in a specific location may not be obtainable in the next try. In this instance there is no fault with the device. Please wait a while before trying to obtain a new location.

## SUPPORT

If you have any questions or comments, please contact our Customer Care:

- +1 888-497-1329 Monday through Friday, 8am - 4pm (PST), Closed on holidays
- [www.vectu.com/faq](http://www.vectu.com/faq) is updated regularly with answers to Frequently Asked Questions (FAQs)

## CARE AND PREVENTIVE MAINTENANCE

Please review the Care and Preventive Maintenance section carefully.

- This Product should be kept clean and dry at all times. Do not clean with liquid or aggressive solvents, but rather a clean dry cloth.
- This Products should only be stored and operated within the specified temperature range
- Avoid leaving the Product in direct sunlight for extended periods of time.
- To minimize the risk of damage, avoid dropping and operating in high-shock and high-vibration environments
- This Product uses an internal, non-user replaceable battery. Do not remove or attempt to remove this non-user replaceable battery.
- Replace chargers with worn or frayed cables.
- You should only use Aspenta approved AC chargers and accessories for this Product.

## REPAIRING OR MODIFYING YOUR DEVICE

Never attempt to repair or modify Vectu device, it does not contain any user-serviceable parts. Attempting to disassemble your device may cause damage that is not covered under the warranty. Service should only be provided by Aspenta or an authorized Aspenta service provider.

## LIMITED WARRANTY

This product is warranted to be free from defects in materials and workmanship under normal use for 12 months (24 months for European Customers) from the date of purchase. For full details regarding the Limited Warranty and warranty claim procedures, visit [vectu.com/warranty](http://vectu.com/warranty).

EXCEPT AS PROVIDED ABOVE, THE PRODUCT IS SOLD “AS IS” WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES FOR THE PRODUCT WHATSOEVER, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES REGARDING THE CONDITION, DESIGN, SPECIFICATIONS, WORKMANSHIP, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCT, OR ANY WARRANTIES THAT THE PRODUCT IS FREE FROM LATENT DEFECTS OR DEFICIENCIES, OR THAT THE PRODUCT IS FREE FROM INFRINGEMENT OF ANY PATENT, TRADEMARK, COPYRIGHT OR PROPRIETARY RIGHT OF ANY THIRD PARTY AND SUCH WARRANTIES ARE HEREBY EXPRESSLY DISCLAIMED.

THIS LIMITED WARRANTY PROVIDES THE SOLE AND EXCLUSIVE REMEDY FOR ANY DEFECTS IN THE PRODUCT. IN NO EVENT SHALL WE BE LIABLE FOR ANY INDIRECT, CONSEQUENTIAL, SPECIAL, INCIDENTAL OR PUNITIVE DAMAGES, WHETHER IN CONTRACT, TORT, NEGLIGENCE, STRICT LIABILITY OR OTHERWISE. OUR LIABILITY IS LIMITED TO THE AMOUNT YOU PAID FOR THE PRODUCT THAT IS THE SUBJECT OF A CLAIM. THE APPLICABILITY OF THE ABOVE LIMITATIONS AND EXCLUSIONS MAY VARY FROM STATE TO STATE, OR COUNTRY TO COUNTRY.

## FCC COMPLIANCE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. This device meets the FCC Radio Frequency Emission Guidelines and is certified with the FCC as FCC ID number: 2ADTO-PLT-001.

This Product generates, uses, and can radiate radio frequency energy and, if not used in accordance with the instruction manual, may cause harmful interference to radio communications.

## NOTICES

Information in this document is subject to change without notice. This document is provided “as is” and Aspenta International Inc. (“Aspenta”) and its affiliated companies and partners assume no responsibility for any typographical, technical or other inaccuracies in this document. Aspenta reserves the right to periodically change information that is contained in this document. However, Aspenta makes no commitment to provide any such changes, updates, enhancements or other additions to this document to you in a timely manner or at all. Visit the Aspenta Web site ([www.aspenta.com](http://www.aspenta.com)) for current updates and information concerning the use and operation of this and other Aspenta Products.

The Service is provided at our discretion. We can modify or cancel it or take corrective action at any time without prior notice and for any reason, including, but not limited to, installation of required updates to the service or Aspenta Products or your violation of any of the [Terms of Service](#). Aspenta may also change these Terms of Service from time to time, which changes shall become effective upon posting to the Aspenta Web site. To stay up-to-date, please make sure to check the Aspenta Web site.

Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded, or stored in any storage medium, for any purpose without the express prior written consent of Aspenta. Aspenta hereby grants permission to download a single copy of this manual onto some form of electronic storage medium to be viewed and to print one copy of this manual or any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice. Further, any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

©2015 Aspenta International Inc. All rights reserved. Aspenta and Vectu are registered trademarks of Aspenta International Inc. All other trademarks are property of their respective owners.



# vectu®

**DECLARATION OF CONFORMITY FOR EUROPEAN CUSTOMERS**

Hereby, Aspenta International, Inc. declares that this Product is in compliance with the essential requirements and other relevant provisions of Directive 1995/5/EC. To view full Declaration of Conformity, visit [www.vectu.com](http://www.vectu.com).

 @myVectu

 myVectu

 [vectu.com](http://vectu.com)